

JR2000N Series

Desktop Robot



Desktop Robot JR2000N Series brought to you by JANOME, a name with extensive manufacturing experience behind it, since 1993.

In addition to the simple teaching system, JANOME has created a customizing function which allows the user to create their own original programs.

With a standard operation range of 510mm×510mm, it is at the top of its range.


High precision

● High Rigid Structure

A solid aluminum alloy die cast is employed on the base and an aluminum alloy extrusion with a high rigid section is employed on the column.

● Labyrinth Mechanism

A special labyrinth mechanism underneath the work table prevents foreign objects (e.g. screws, liquid or dust).

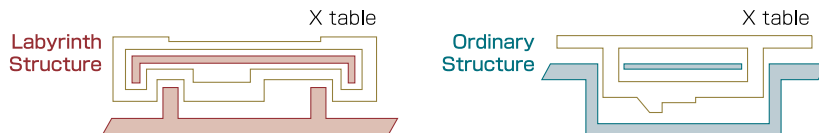

● Smooth Movement

Smooth movement is attained with the micro-step control system.

● Flexible Interface

- RS-232C port for PC connection
- RS-422 port for teaching pendant
- I/O (Output 16, Input 16)

User friendly

● Clear Wide Screen

Wide and easily viewable teaching pendant screen.
Language : English/German/Japanese, etc
Measurement : mm/inch

● Simple Teaching


Using the JR C-Points software, users can teach data easily. It also has commands to operate particular jobs. Users can create their own original software, as well too.

● Enhanced Memory Capacity

Up to 255 programs (2.5 times that of the existing model) and 30,000 points (increased 5-fold) can be stored as teaching data.

● Simple Sequencer

The robot has a built-in simple sequencer which functions independently (it is not necessary to add more hardware in the case of simple PLC connection).

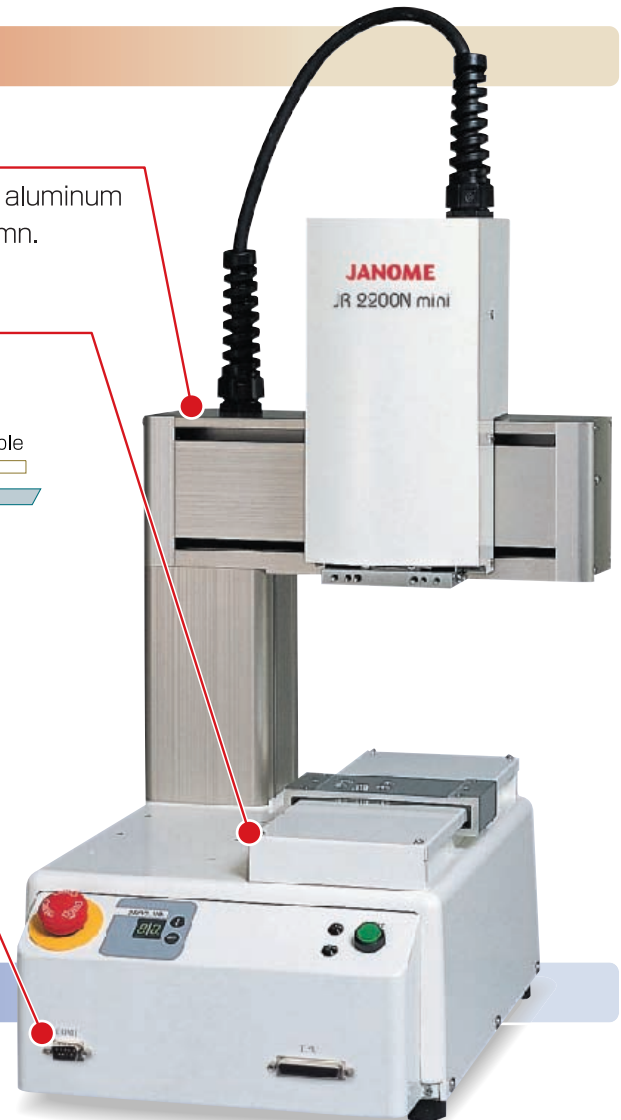

4-axis simultaneous control model

Create your own original programs with the customizing function.

Work Position Input

Before inputting a work position, select JOG or MDI mode simply by pressing the button on the teaching pendant. **Clearly-displayed coordinate values** allow you to correct positions easily.

Program 1	P 1
X	0 mm
Y	3 5 0 mm
Z	0 mm
R	0deg
High	
FUNC	POS
JOG	MDI
INT	

Work Position Setting Screen

Sequencer Function

A sequencer function which can be run independently from the robot function.

Sequencer 1	2/3
001 Id #genIn3	
002 and #genIn5	
003 out #genOut1	
004 mps	
005 Id #mv(1)	
006 or #mv(2)	
007 and #genIn2	
008 out #genOut2	
009 out #mv(3)	
010 mrd	
011 and #mv(3)	
012 set #genOut3	

Sequencer Command Setting Screen

Application Software Examples

●Screw Tightening Software

Register **screw tightening conditions**, such as **Thread Pitch**, **Screw Length**, and **Rotate Speed**, then enter the **"screw tightening" position** and the **screw tightening condition number** for the point. A screw tightening program is now complete. You can set different tightening condition numbers to each point so as to create different screw tightening conditions in a program.

Tightening Condition 1	1/2
Type	Full Tightening(With Pickup)
Thread Pitch	0.5mm
Rotate Speed	600rpm
Screw Length	8mm
Check Precision	Normal
Float Amount	0.5mm
Time After Tightening	0.2sec
Feeder ESC Signal	NO
Point of Feeding	
Screw Feed Time	0.5sec
Stop After Feeding	NO
Error Restart	Next Point

Tightening Condition Setting Screen

●Dispensing Software

Complete a dispensing program simply by **inputting work positions**, such as **"Point Dispense"**, **"Start of Line Dispense"**, **"Line Passing"**, and **"End of Line Dispense"**. You can set **"Dispense Time"** to each "Point Dispense" point. You can change **Dispense Conditions**, such as **"Device Mode"**, **"Signal Operation type"** (for dispenser), **"Wait Time"** (from Dispense ON to start shifting), **"Up Amount"** and **"Up Speed"** (at end dispensing), simply by **setting and registering**.

Program 28	P16	1/2
Point Dispense		
Start of Line Dispense		
Passing of Line Dispense		
CP Arc Point		
End of Line Dispense		
Wait Start Point		
PTP Point		
CP Start Point		
CP Passing Point		
CP Stop Point		
CP End Point		
PTP Evasion Point		

Point Type Setting Screen

●Palletizing or Work Position Adjustment by Camera

By setting a **"Pallet Number"**, you can repeat the same operation at different points. By setting a **"Work Adjustment Number"**, you can easily adjust a position error between the standard position captured by the camera.

Program 1			
RX+23.2 RY+312.5 Z+25 R+12			
Type	Point Dispense		
Dispense Time	1.3sec		
Pallet Routine Number	1		
Work Adjustment Number	5		
Condition Number			
Job before Moving			
Job while Moving			
Point Job Number			
PTP Condition Number			
Tool Number			
S.MARK	E.MARK	J.EXEC	P.EXEC

Point Setting Screen

How to Create Application Software

You can create **original application software** for a variety of needs. For example, define a **point type "Point Dispense"** when creating the **"Dispensing Application"** software.

Register the contents of the **"point dispense"** operation in the **point type definition**. (e.g. Start the dispenser (set #genOut1), wait for a dispense time (delay Dispense Time*100), and then stop the dispenser (reset #genOut1).)

Register **"Common Setting Variables Definition"** in the point type definition so as to set the **"Dispense Time"** to each point. The process is complete simply by entering necessary items, such as **"Variable Type"**, **"Variable Caption"**, and **"Input Unit"**. Set **"Enumeration Type"** or **"Numeric Type"** as the **"Variable Type"**. If you select the **"Enumeration Type"**, you can select a value from the **"Selection Item"** list and set it.

Furthermore, you can set **"Variable Caption"**, as well as variable names (identifiers), as a title display.

Point Type Definition	pointDispense
Protect Mode	Public
Base Type	PTP Point
Point Type Title	
Job before Moving	
Job while Moving	
Point Job	
Job while CP Moving	
Additional Function Number	
Point Setting Variables	
Definition	

Point Type Definition Setting Screen

Point Job	2/3
013	
014 Id DispenserSignalType==1	
015 then	
016 waitCondTime 500	
017 Id #genIn1	
018 timeUp	
019 reset #genOut1	
020 jump L1	
021 endWait	
022 endIf	
023 delay DispenseTime*1000	
024 reset #genOut1	

Point Job Setting Screen


Point Setting Variables Definition	
variable Type	
Variable Caption	
Input Unit	
Decimal Figure	
Default Value	
Maximum Value	
Minimum Value	

Point Setting Variables Definition Setting Screen

PC Software "JR C-Points" (Option)



entering necessary items, such as the **point type**, **work position**, **line speed**, **pallet number**, and **work adjustment numbers**.

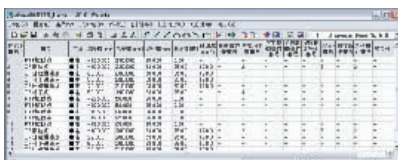


The JR C-Points is an enhanced version of the PC software for desktop robots, JR Points. Tried and tested **simple programming methods for various applications remain**. Furthermore, **additional and enhanced compile function (robot language) and customizing functions are available**.

The main screen is the plural point data setting screen. You can create a program simply by en-

You can select the **horizontal display** or **vertical display** for point alignments.

Coordinates data edited by **spreadsheets** such as Microsoft Excel can be downloaded easily by using the **Copy & Paste function**. You can also convert drawings into coordinate values and download them onto a PC using **CAD data (DXF file)**.

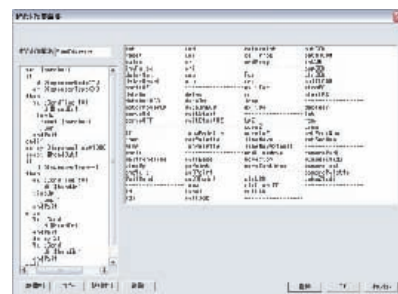

You can enter and edit **point job** easily by selecting a desired command from the **job command list**.

Using the **compile function**, you can also read the point job data from **text files**. As well as **local variables**, **global variables**, and **keep variables**, you

can use **setting variables** to set values as teaching parameters. As one of the robotic features, various **special commands**, such as "waitCondTime" command to wait for an input signal (timeouts are available until receiving the input signal), are available.

A broad interface makes it easy to use many applications.

JANOME

Robot Applications



Dispensing

- Simultaneous control of X, Y, Z and R axes
- Adhesion, potting, sealing; use with various materials
- Instantaneous adhesive, silicon, epoxy resin, flux for soldering

Screw Fastening

KX Servo Driver (High precision torque control)

- Used for applications requiring precise tightening. Input exact conditions for torque, speed, degree, rotational direction and time.

Electric Driver

- Used for standard applications requiring mechanical torque adjustment. It performs loose-tightening tolerance checking and failure alert.



Soldering

- Simultaneous control of X, Y, Z and R axes
- Point, line or arc soldering
- Quick change soldering tip
- Ideal for circuit boards, lead wires, QFP, piezoelectric parts

CCD Camera & Height Sensor

- The CCD camera and height sensor integrate to supply high-speed precise inspection and accurate detection for pick & place, dispensing, and soldering applications.
- Provides easy teaching and automatic transfer function for off-positioned work pieces on the fixture.



Board Cutting

- PC board cutting without stress and cracks is achieved.
- A twin-head router is also available.

Option

Operation Box...With the start switch, program change switch, and emergency stop switch
I/O Cable



Enhanced lineup with an operation range between 200mm×200mm and 510mm×510mm.

JANOME


JR2200N mini Series

Low-cost cell production



External Dimensions for the JR2203N

※The standard open height for the JR2204N is 205 mm.

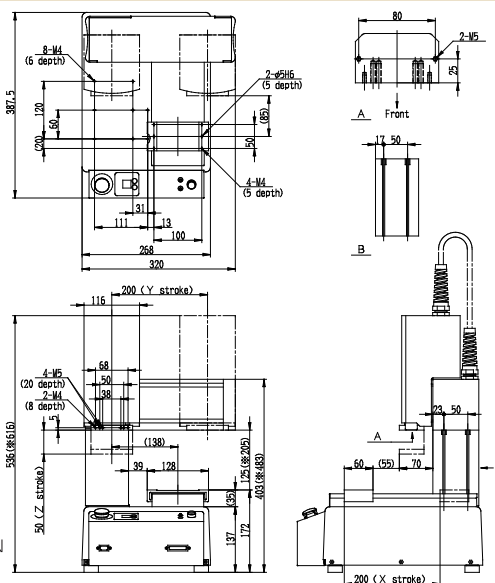


JR2300N Series

With an operation range of 300×320mm, 2 screw feeders can now be installed.



External Dimensions for the JR2303N

※The standard open height for the JR2304N (4 axes application) is 350 mm.

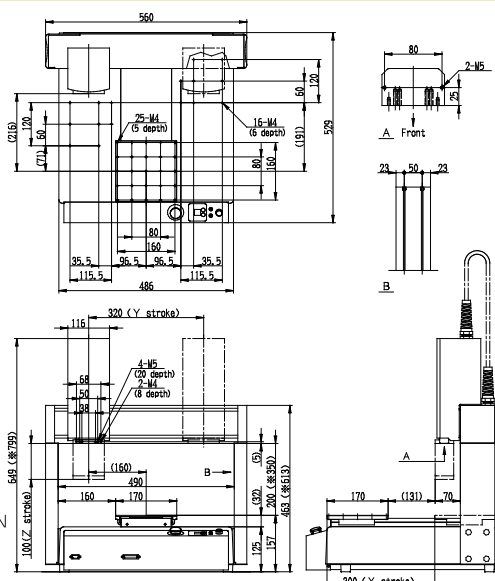

JR2400N Series / JR2500N Series★


The wide operation range 400×400 mm allows large workpieces to be easily moved.



This photograph is of the JR2400N series.

External Dimensions for the JR2403N

★Please contact us for the external dimensions of the JR2500N.
※The standard open height for the JR2404N (4 axes application) is 350 mm.

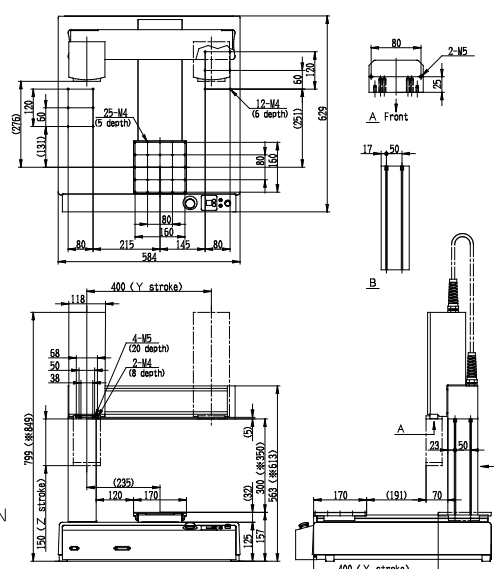

■ Main Specifications for JR2000N Series

Model number Axis-type* ¹		JR2203N	JR2204N	JR2303N	JR2304N	JR2403N	JR2404N	JR2503N	JR2504N
		3	4	3	4	3	4	3	4
Range of operation	X,Y axis	200mm×200mm		300mm×320mm		400mm×400mm		510mm×510mm	
	Z axis	50mm		100mm		150mm		150mm	
	R axis		±360°		±360°		±360°		±360°
Portable weight* ²	Work	7kg		11kg		11kg		11kg	
	Tool	3.5kg		6kg		6kg		6kg	
Speed	PTP (X,Y)	500mm/sec (5~500mm/sec)* ⁴		800mm/sec (8~800mm/sec)* ⁴		800mm/sec (8~800mm/sec)* ⁴		800mm/sec (8~800mm/sec)* ⁴	
	PTP (Z)	250mm/sec (2.5~250mm/sec)* ⁴		320mm/sec (3.2~320mm/sec)* ⁴		320mm/sec (3.2~320mm/sec)* ⁴		320mm/sec (3.2~320mm/sec)* ⁴	
	PTP (R)		600°/sec (6~600°/sec)* ⁴		800°/sec (8~800°/sec)* ⁴		800°/sec (8~800°/sec)* ⁴		800°/sec (8~800°/sec)* ⁴
	CP (X,Y,Z)* ³	500mm/sec (0.1~500mm/sec)* ⁴		800mm/sec (0.1~800mm/sec)* ⁴		800mm/sec (0.1~800mm/sec)* ⁴		800mm/sec (0.1~800mm/sec)* ⁴	
Acceptable Moment of Inertia			65Kg・cm ²		90Kg・cm ²		90Kg・cm ²		90Kg・cm ²
Repeatability accuracy	X,Y axis	±0.01mm		±0.01mm		±0.01mm		±0.01mm	
	Z axis	±0.01mm		±0.01mm		±0.01mm		±0.01mm	
	R axis		±0.02°		±0.02°		±0.02°		±0.02°
Dimensions	Width×Depth×Height	320mm×380mm×540mm		560mm×530mm×650mm		590mm×630mm×800mm		680mm×730mm×800mm	
Weight		18kg		35kg		42kg		43kg	
Power source		AC90~132V/AC180~250V (single phase)							
Consumption current		200VA							
Working ambient temperature		0~40℃							
Relative humidity		20~95% (no condensation)							
Teaching Method		Remote Teaching (JOG) , Manual Data Input (MID)							
Teaching System		JR C-Points:Simple or broad-use teaching systems ・ Simple: Easy teaching just by registering position and parameter ・ Broad-use: User-oriented programming such as I/O control, teaching by point job.							
Teaching Pattern		・ Programming by teaching pendant (Optional) ・ Off line teaching using a PC (Optional)							
Program capacity		255programs							
Data memory capacity		Maximum 30,000 points* ⁵							
Drive method		5-phase stepping motor							
Control method		PTP and CP							
Interpolate Function		3dimension line and Arc interpolation							
External interface		RS232C 1ch (For PC), 2ch (For External Device-optional) / RS422 1ch (For Teaching Pendant only)							
External input/output		IN : 16,OUT : 16 (IN : 24,OUT : 24 Optional)							
PLC function		100programs,1000steps / 1program							

※1 Also available with 2 axes.

※2 Maximum Portable Weight for 2 axes models is 6.5 kg for the Tool and 7 kg for the Workpiece for the JR2202N, 10 kg for the Tool and 11 kg for the Workpiece for the JR2302N, JR2402N and JR2502N.

※3 Restricted by drive condition.

※4 Speed Range

※5 Point data shares memory with additional point data, point job data and sequence data.

If this data is increased, the maximum data memory available is reduced.

☆ We can supply the robot for CE certified (optional)

● Specifications may change due to product upgrade without prior notice.

Desktop SCARA robot
JSR/JS series is also available.



2004.09 (S) 5000

JANOME

Janome Sewing Machine Co., Ltd.

Industrial Automation Systems Division
1463 Hazama-cho, Hachioji-shi, Tokyo 193-0941 JAPAN
Tel : +81 426 61 6301, Fax: +81 426 61 6302

Business Line : Desktop SCARA robot, Servo Press, etc.

U R L : <http://www.janome.co.jp/industrial.html>

E-mail : j-industry@gm.janome.co.jp

Distributor



總公司

臺灣國瀚企業股份有限公司

GO-ON TECH ENTERPRISES CO., LTD

臺北縣三重市光復路2段80號7樓之3

7F-3 NO. 80 SEC. 2 KWANG FU RD.

SAN CHUNG CITY TAIPEI TAIWAN

E-mail: goon@goontech.com.tw

TEL: 886-2-29996191

FAX: 886-2-29996200

上海分公司

上海永瀚自動化設備有限公司

SHANGHAI GO-ON TECH CO., LTD

NO. 7 BUILDING, No. 555, LIAN MING

ROAD, SHANGHAI, CHINA

E-mail: goon@go-ontech.net

TEL: 86-21-64619771 64619772

FAX: 86-21-64619770